

## Connecting to SR2

**Important:**

- 1) Ensure the magnetic lock is set for 24v dc operation
- 2) Remove the black jumper link from the rear of the door panel

