

Add a User PIN or add a key fob

Always make a note of the User ID's when adding a User PIN or key fobs

Star *(Master Code 6666) # Hash

Enter 1 (Then enter the first User ID which will be 1) # (Enter your PIN or present key fob) # *
to exit

Adding a second or third User PIN or key fob

Note the User ID MUST be the next sequential number

Star *(Master Code 6666) # Hash

Second user Enter 1 (Then enter the first User ID which will be 2) # (Enter your PIN or present
key fob) # * to exit

Third user Enter 1 (Then enter the first User ID which will be 3) # (Enter your PIN or present
key fob) # * to exit

Delete a User PIN or key fob

Star *(Master Code 6666) # Hash

2 (Enter the User ID) # * to exit

Change a User PIN (No need to enter program mode for this)

Star *(User ID#) (Old PIN #) (New PIN #) (New PIN #)

Delete all PINs or key fobs

*(Master Code 6666) #

20000 # * to exit