


Connection to a 3rd party Wiegand controller or our PC access control system AC8001/2

Set Operation Mode – Wiegand

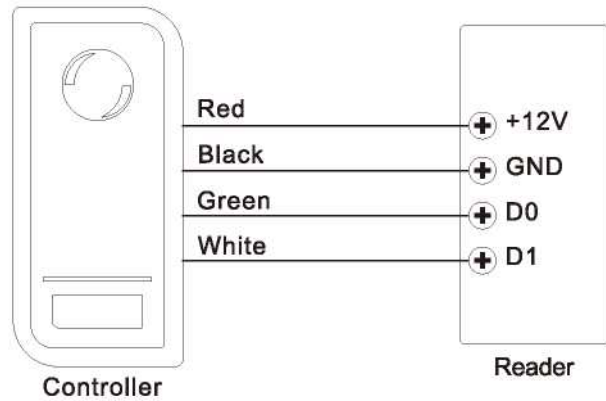

Programming Step	Remote Control Operation
1. Enter Program Mode	* (Master Code) #
2. Wiegand Reader Operation	78 #
4. Exit Program Mode	*

Set Operation Mode to Wiegand format: Connect the Red & Black wires ONLY, then turn the power supply on. Enter programming mode via the remote-control unit, enter *** (Master Code) # 78 # *** and that's it

When complete, connect the remaining green & white wires to the control board and add cards or key fobs to the system as per the AC8000 Setup Guide Programming