
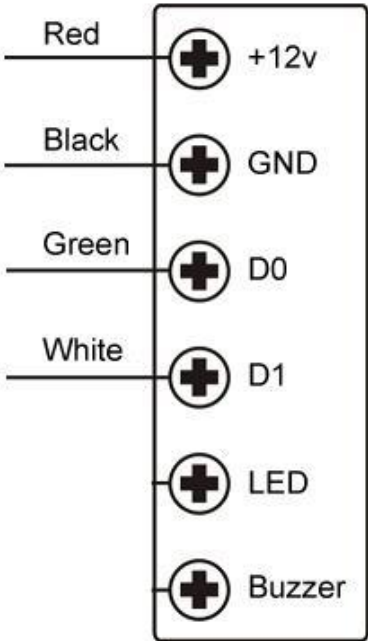


Connection to standard Wiegand controller or PC access control system AC8001/2

To enable the SR2 to operate as a Wiegand card reader, enter program mode *123456#73#*

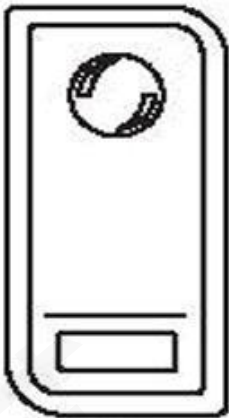

Set Operation Mode to Wiegand format

Connect the Red & Black wires **ONLY** as per illustration, then turn the power supply on. Enter programming mode via the remote control unit as below. When complete, connect the remaining wires to the control board and add cards or key fobs to the system as per the AC8000 Setup Guide

Programming Step	Remote Control Operation
1. Enter Program Mode	* (Master Code) #
2. Wiegand Reader Operation	73 #
3. Exit Program Mode	*