

Proximity USB Desktop Card Reader – U.I.D

The Proximity USB Desktop Card Reader U.I.D will read the 10 digit U.I.D code number of any RFID Wiegand 26 bit 125 KHz card or key fob using this format - **It will not read MIFARE cards/fobs**

This unit is ideal in conjunction with our access control kits and [Key fob readers](#) where you have several cards or key fobs. A time saving unit as opposed to hand writing all the code numbers printed on the card or key fob and then typing them out in order to populate a user list

Simply plug the unit in to a USB port on your computer, the unit will bleep to confirm communication and that is it! – No software required or additional software drivers to download, it's 'Plug and Play' operation

To generate a card or key fob list:

To do this, ensure the unit is connected to the computer, open **Notepad or Word** on the computer, present a card or key fob over the unit and it will display the 10 digit U.I.D code number – it's that simple

Download our [Card User List](#) template to start you off

