

K401-IE Keypad – Quick Guide

Add a User PIN or add a key fob for the first time

Always make a note of the User ID's when adding a User PIN or key fobs

Star *(Master Code 123456) # Hash

Enter 1 (Then enter the first User ID which will be 1) # (Enter your PIN or present key fob) #

* To exit or continue adding prior to pressing the * button

Adding a second or third User PIN or key fob

Note the User ID MUST be the next sequential number

Star *(Master Code 123456) #

Second user Enter 1 (Then enter the next User ID which will be 2) # (Enter your PIN or present key fob) #

* To exit

Third user Enter 1 (Then enter the next User ID which will be 3) # (Enter your PIN or present key fob) #

* To exit

Delete a User PIN or key fob

Star *(Master Code 123456) #

2 (Enter the User ID) #

* To exit

Change a User PIN (No need to enter program mode for this)

Star *(User ID#) (Old PIN #) (New PIN #) (New PIN #)

Delete all PINs or key fobs

*(Master Code 123456) #

2(Master Code 123456) #

* To exit

Change Master code

Star *(Master Code 123456) #

0 (New Master Code) # (Repeat New Master Code) #

* To exit

Reset to Factory Default:

This will reset the K401-IE to the factory default but all card/PIN information will still be retained

This procedure will also require reprogramming of the Master Add and Delete Cards

NOTE: This is also useful if the original Master Add and Delete Cards have been lost

1. Power down the K401-IE
2. Press the * (Star) button and hold, at the same time power up the keypad
3. Release the button when you hear two bleeps and wait until the amber LED shines

(Parts 4 & 5 must be undertaken within 10 seconds)

4. Present any 125KHz proximity EM card or the Master Add Card (provided) to the K401-IE
This card is now the Master Add Card

5. Present any 125KHz proximity EM card or the Master Delete Card (provided) to the K401-IE
This card is now the Master Delete Card

When the red LED is on, the K401-IE has been successfully reset