

K401-EW Keypad – Quick Guide

Add a User PIN or add a key fob for the first time

Always make a note of the User ID's when adding a User PIN or key fobs

Star *(Master Code 123456) # Hash

Enter 1 (Then enter the first User ID which will be 1) # (Enter your PIN or present key fob) #

* To exit or continue adding prior to pressing the * button

Adding a second or third User PIN or key fob

Note the User ID MUST be the next sequential number

Star *(Master Code 123456) # Hash

Second user Enter 1 (Then enter the next User ID which will be 2) # (Enter your PIN or present key fob) #

* To exit

Third user Enter 1 (Then enter the next User ID which will be 3) # (Enter your PIN or present key fob) #

* To exit

Delete a User PIN or key fob

Star *(Master Code 123456) # Hash

2 (Enter the User ID) #

* To exit

Change a User PIN (No need to enter program mode for this)

Star *(User ID#) (Old PIN #) (New PIN #) (New PIN #)

Delete all PINs or key fobs

*(Master Code 123456) #

20000 #

* To exit

Change Master code

Star *(Master Code 123456) #

0 (New Master Code) # (Repeat New Master Code) #

* To exit

Reset to Factory Default:

This will reset the K401-EW to factory default but all card/PIN information will still be retained

1. Power the K401-EW down
2. Press and hold the * button and power up the K401-EW
3. There will be two bleeps. Then release the * button, after a second there will be one more bleep to confirm reset