


ZLC-600 Bracket (In-Swing Door Application)

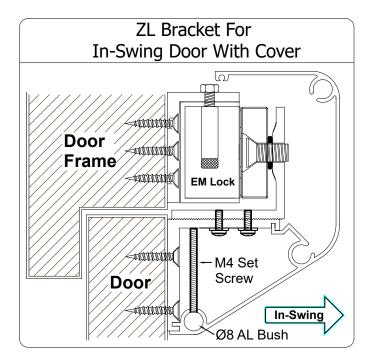

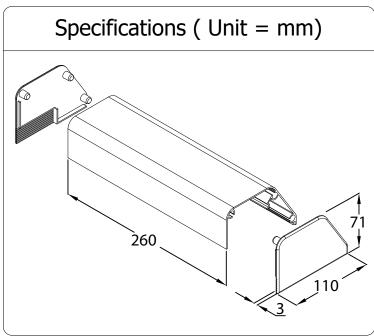

Installation Method

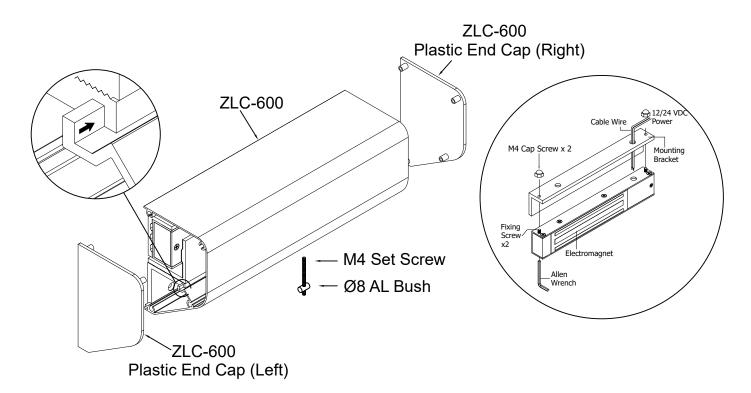

** M4 Set Screw & Ø8 Al Bush to be installed inside the ZLC-600 cover bottom slot first before slotting in the ZLC-600 into the ZL bracket